


## 200-615 Flight Sim Yoke Button Assignments

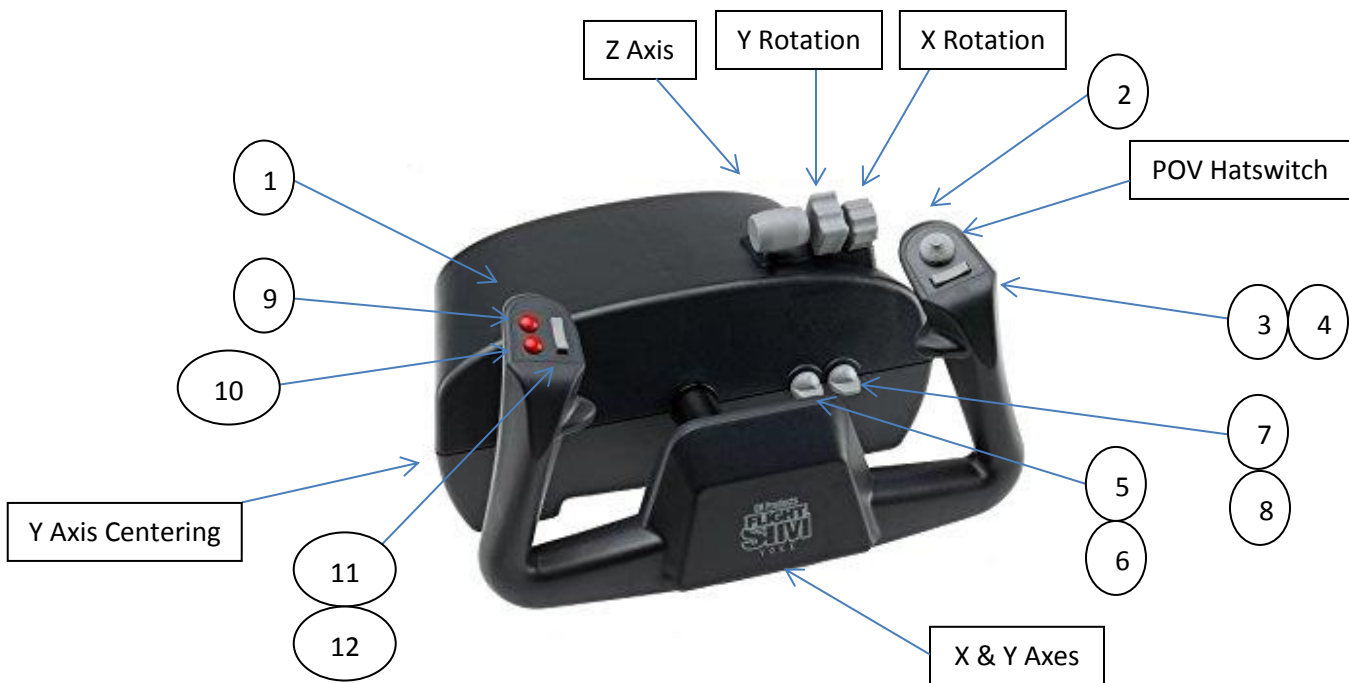

Button 1 = Back Side Left Red Button

Button 2 = Back Side Right Red Button

Button 3 and 4 = Rocker Switch Left/Right, typically used for Rudder Trim

Button 5 and 6 = Toggle Switch Up/Down, typically used for Landing Gear

Button 7 and 8 = Toggle Switch Up/Down, typically used for Flaps

Button 9 = Top Left Red Button

Button 10 = Bottom Left Red Button

Button 11 and 12 = Rocker Switch Left/Right, typically used for Elevator Trim

POV Hatswitch = 8 Directions

X & Y Axes = Yoke Handle, typically used for Elevator and Ailerons

Z Axis = First Lever, typically used for Throttle

Y Rotation = Second Lever, typically used for Propeller

X Rotation = Third Lever, typically used for Mixture