

300-111 - Pro Pedals Button Assignments



X Axis = Left Pedal, typically used for Left Brake
Y Axis = Right Pedal, typically used for Right Brake
Z Axis = Sliding motion, typically used for Rudder